



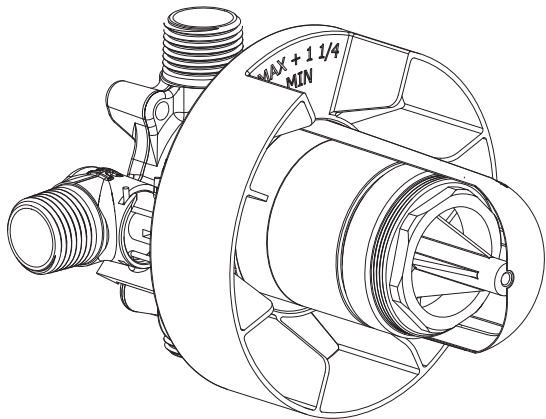

Installation guide / Guide d'installation / Guía de instalación

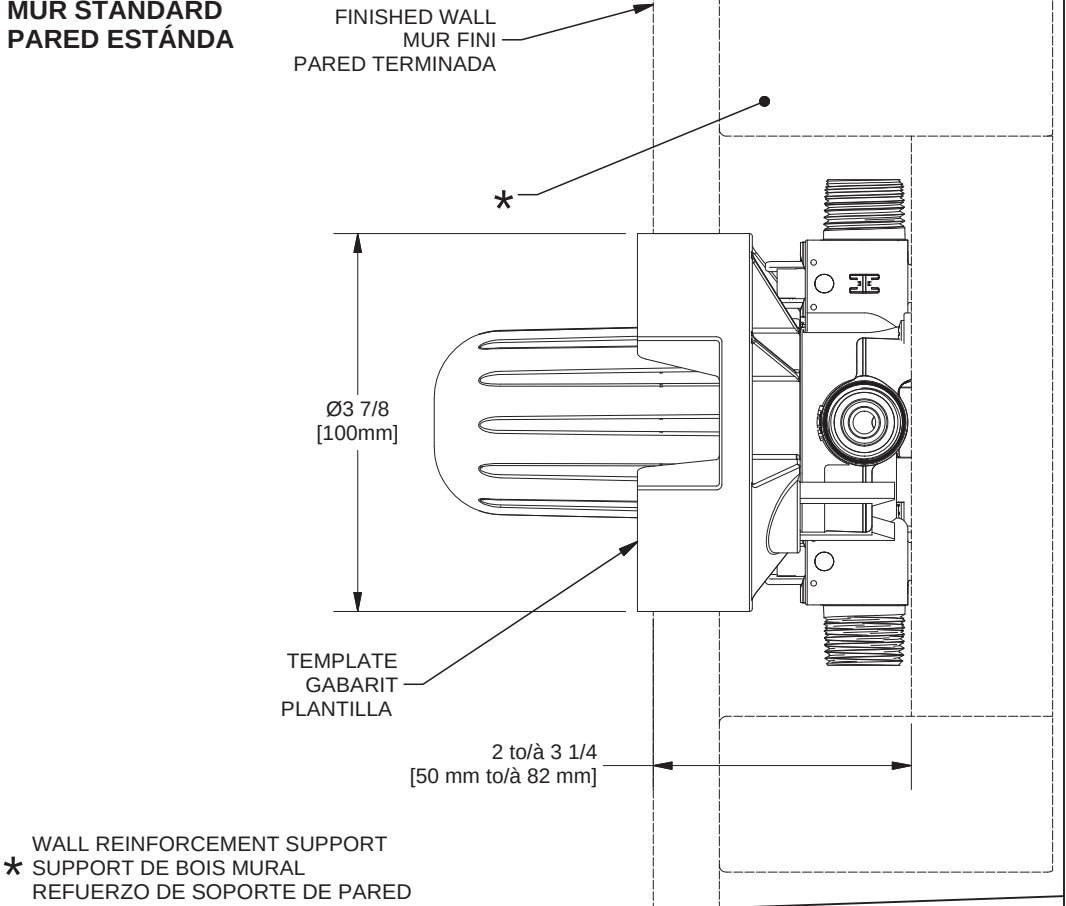

STANDARD WALL
MUR STANDARD
PARED ESTÁNDA



Before beginning the installation:
Read all instructions.
Purge the water supply system before connecting it to the faucet.

Avant de commencer l'installation:
Lire toutes les instructions.
Purger votre système d'alimentation d'eau avant d'effectuer le branchement au robinet.



Antes de iniciar la instalación:
Lea todas las instrucciones.
Es necesario purgar previamente su sistema de alimentación de agua para efectuar la conexión del grifo.

Tools and equipment required / Outils et matériel requis / Herramientas y material requerido para instalación:




WHITE
BLANC
BLANCO


ACRYLIC WALL
MUR EN ACRYLIQUE
PARED DE ACRÍLICO

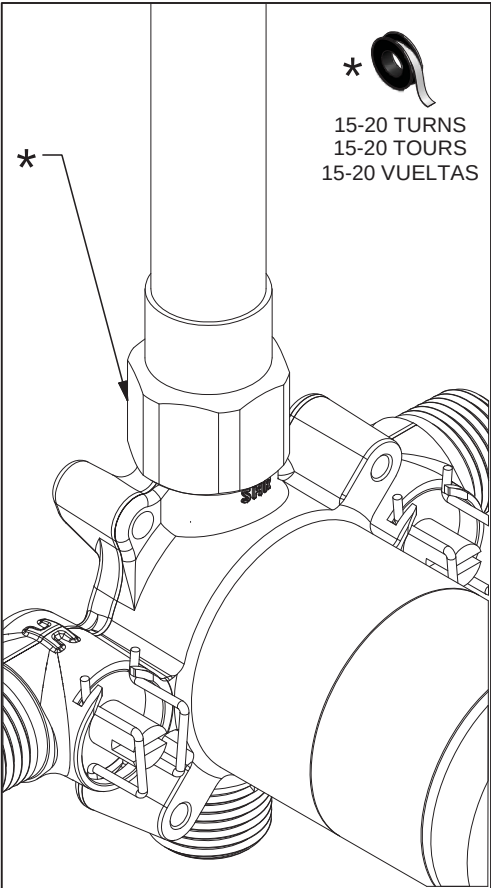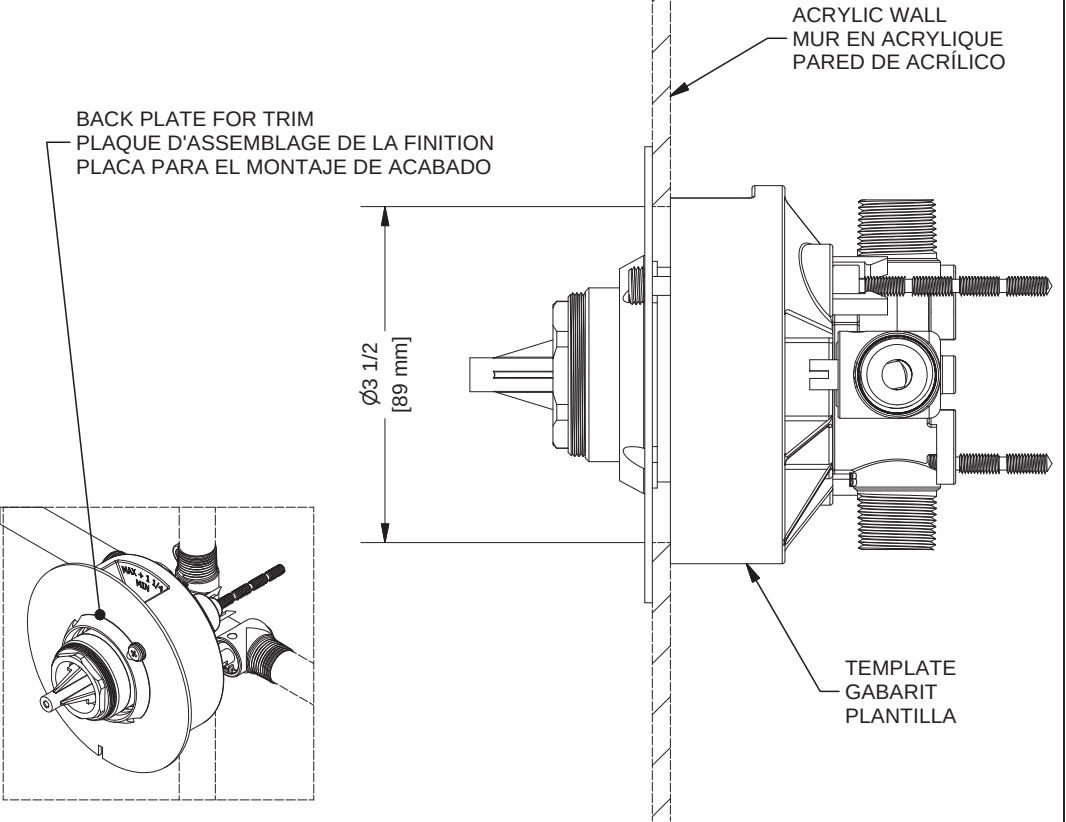


INSTALLATION MALE NPT
INSTALLATION MÂLE NPT
INSTALACION MACHO NPT

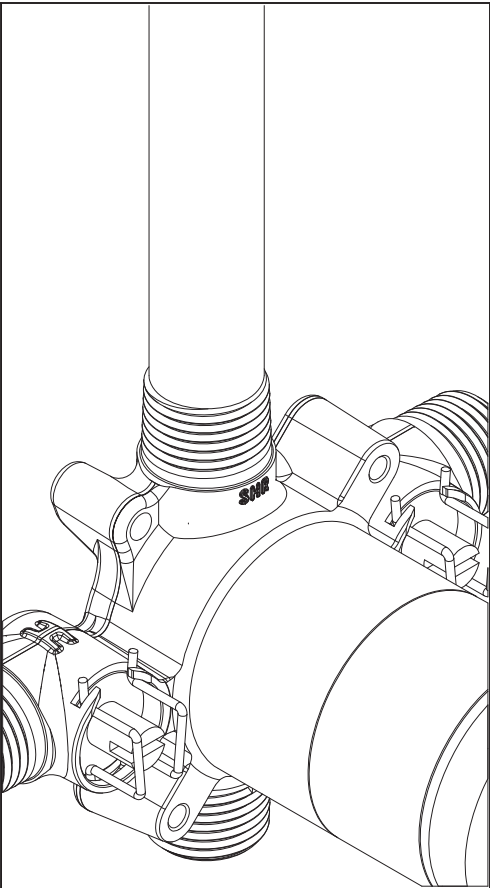






WELDING INSTALLATION
INSTALLATION SOUDÉE
INSTALACION CON SOLDADURA


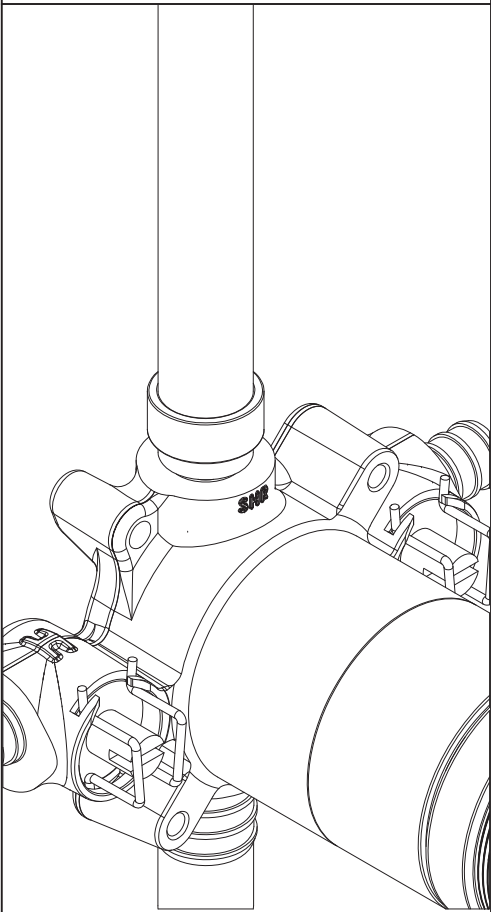


INSTALLATION SPEX
INSTALACION SPEX

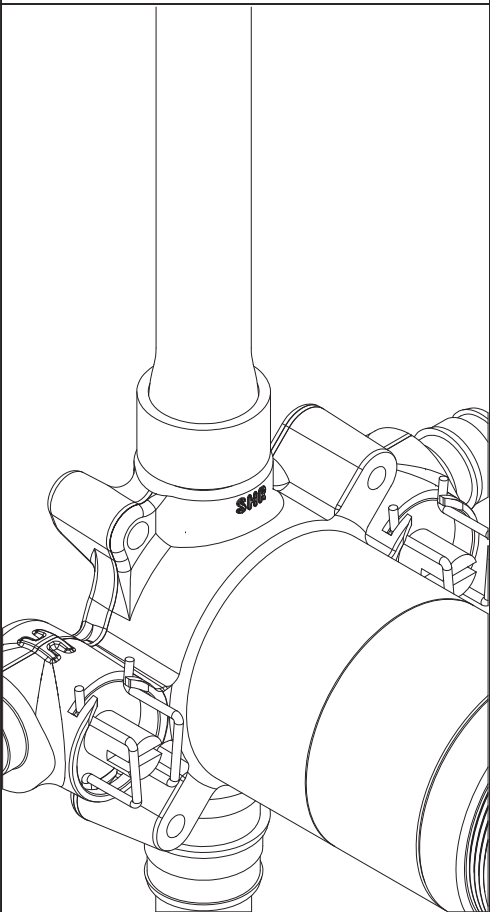


INSTALLATION EX
INSTALACION EX

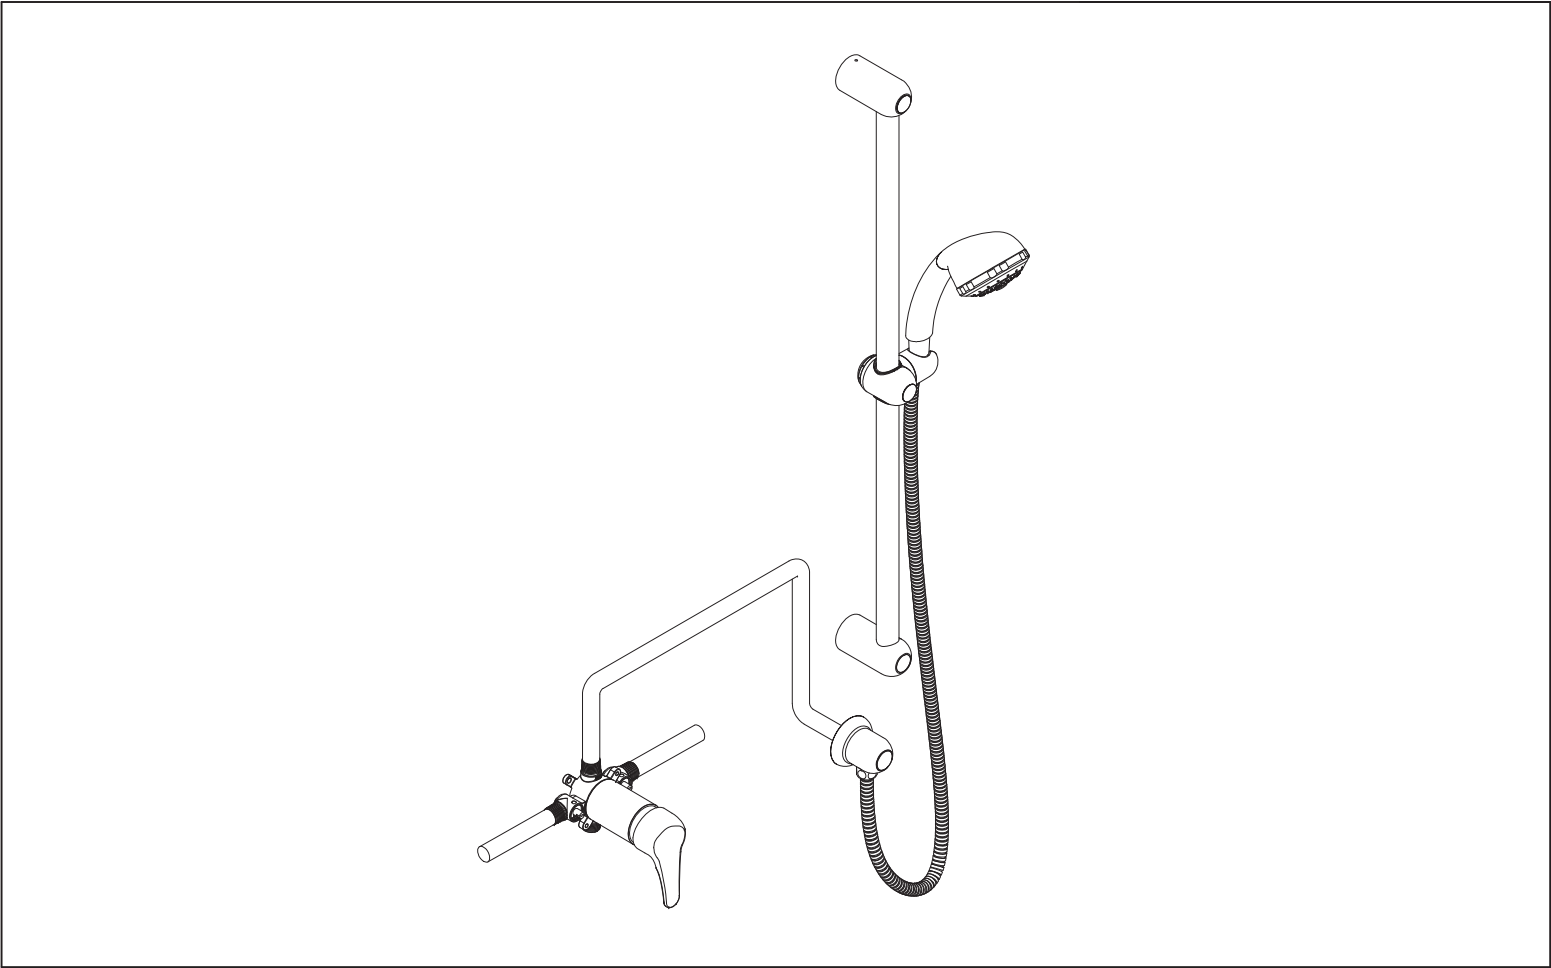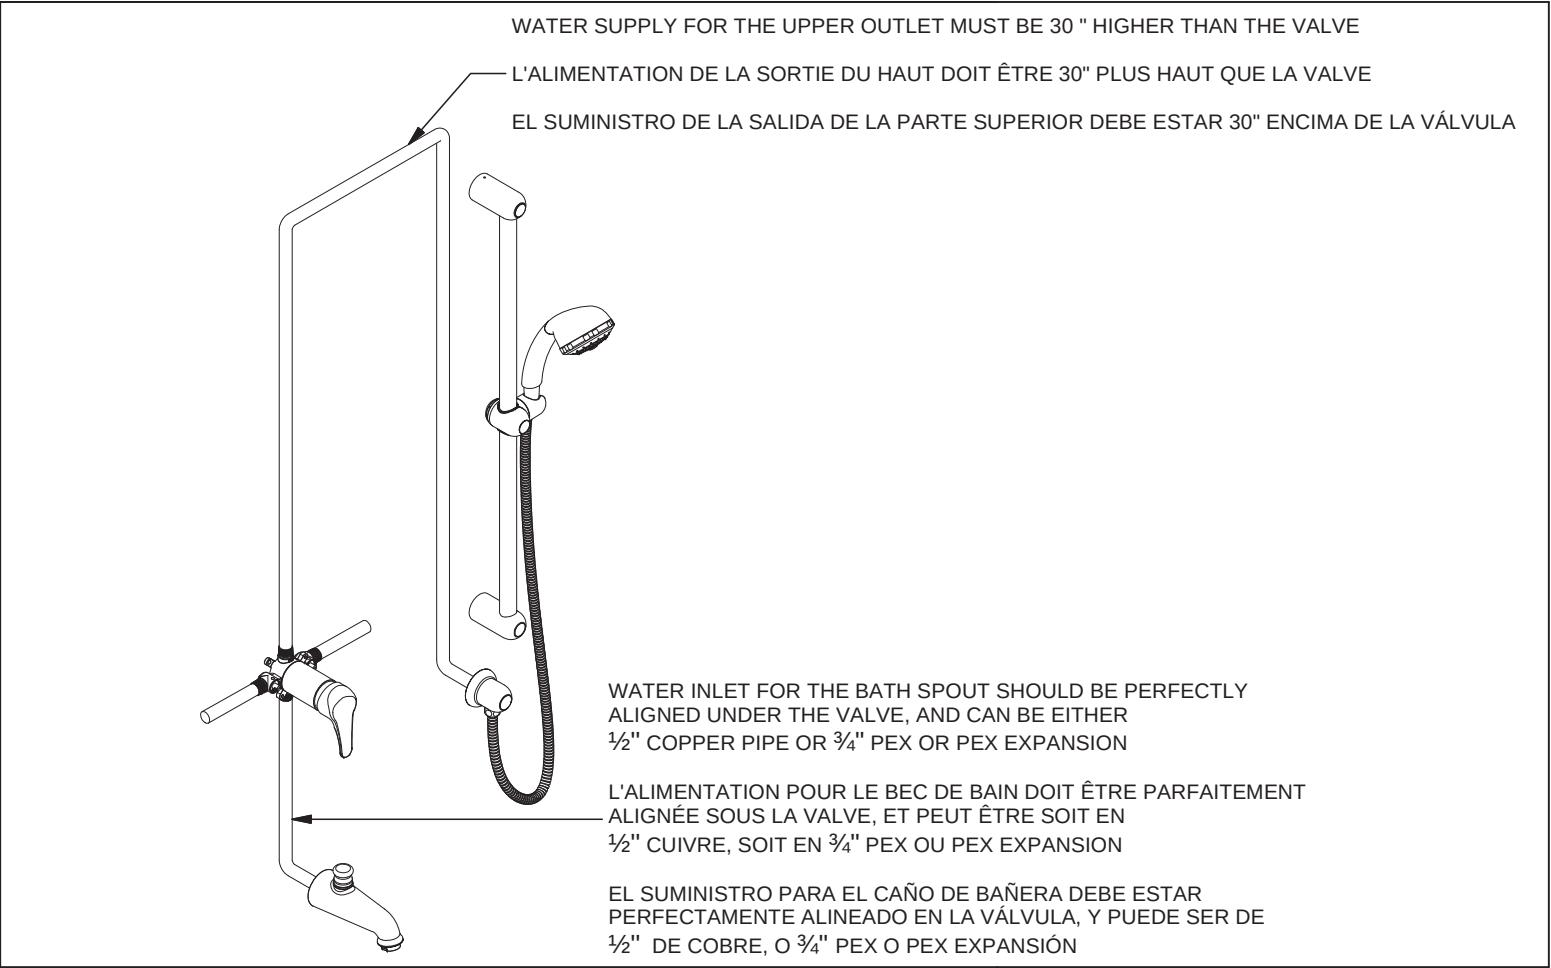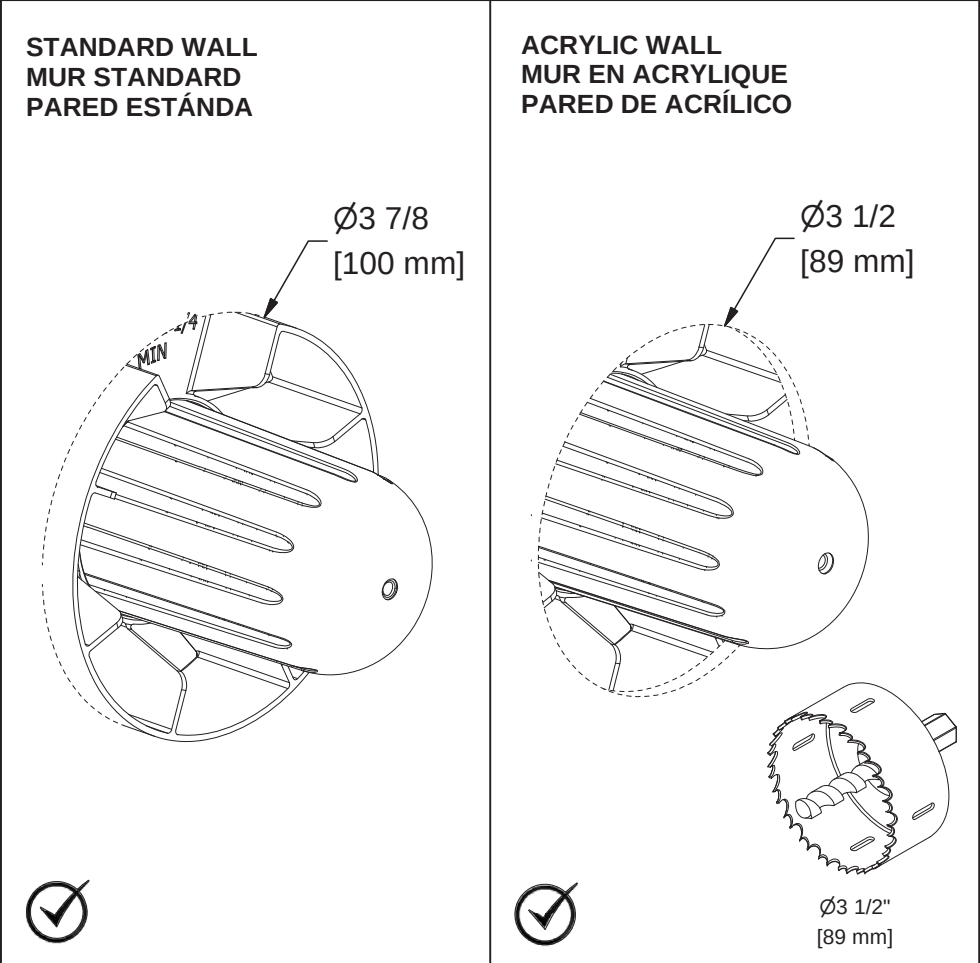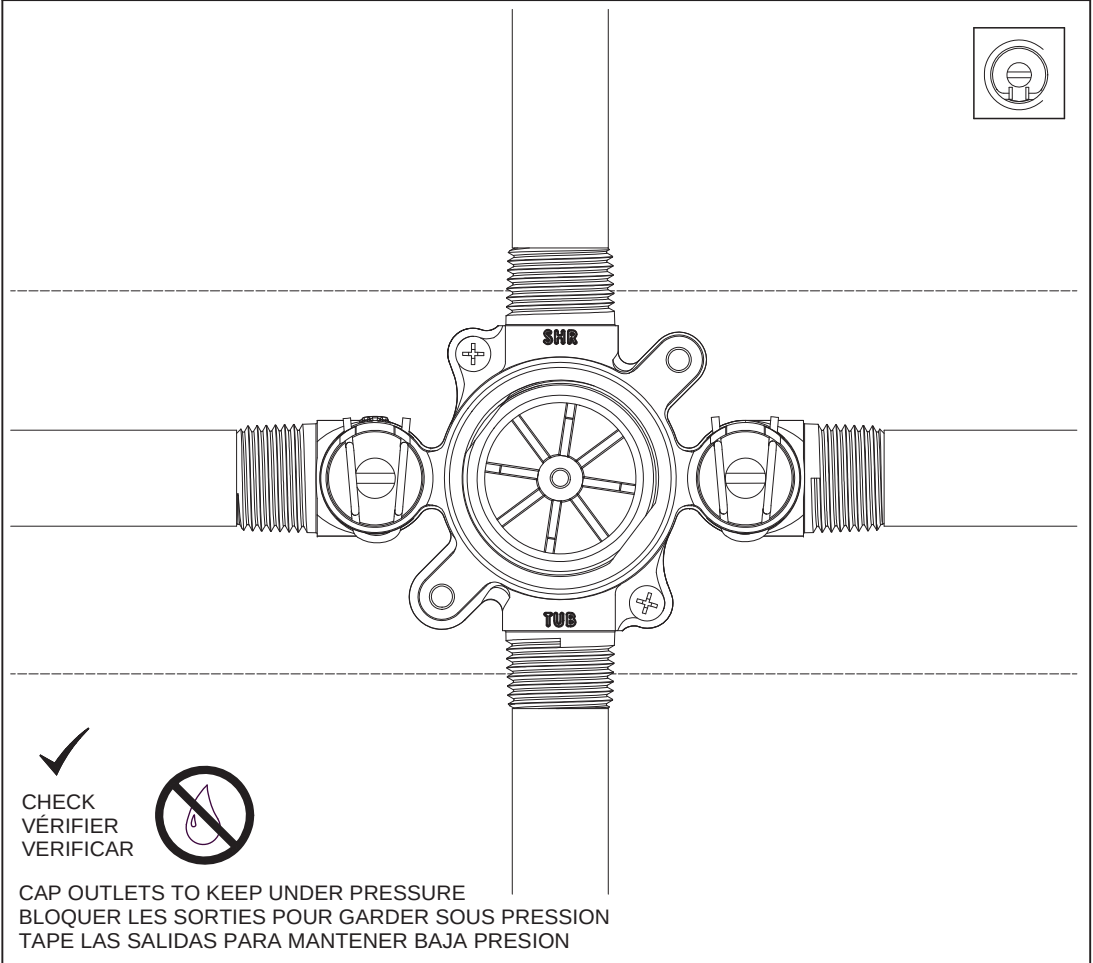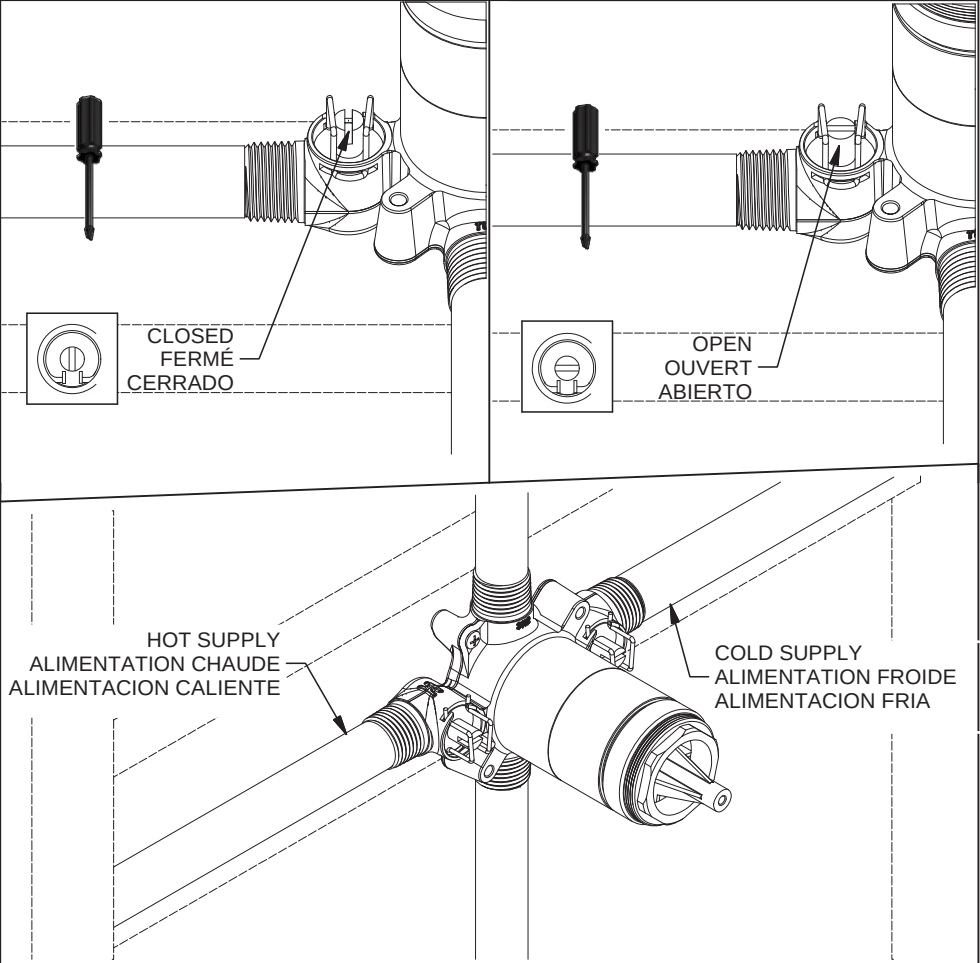


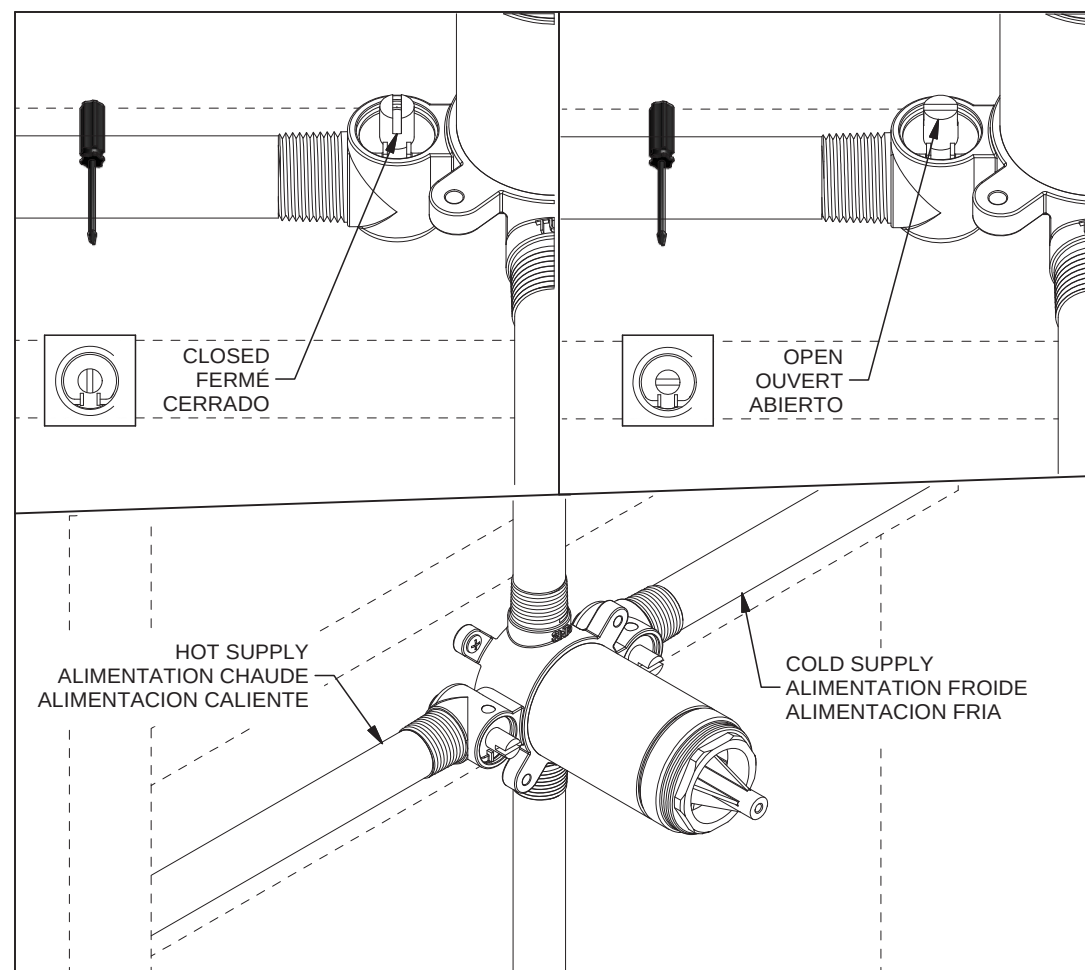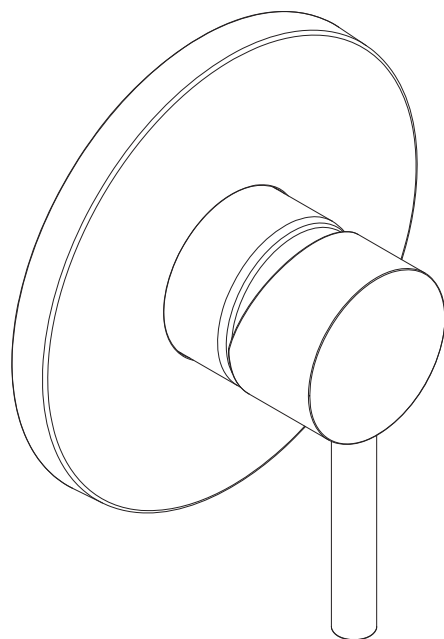


STANDARD WALL
MUR STANDARD
PARED ESTÁNDAR

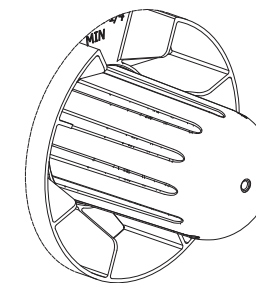


ACRYLIC WALL
MUR EN ACRYLIQUE
PARED DE ACRÍLICO

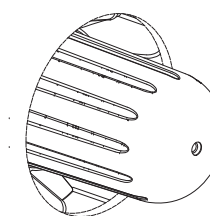

1-A

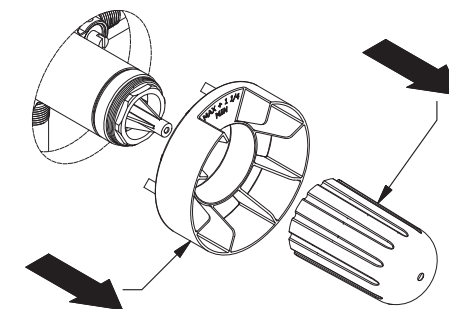

1-B

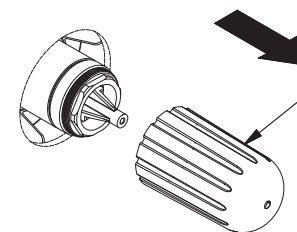

Before beginning the installation:

Read all instructions.
Purge the water supply system before connecting it to the faucet.

Avant de commencer l'installation:

Lire toutes les instructions.
Purger votre système d'alimentation d'eau avant d'effectuer le branchement au robinet.




Antes de iniciar la instalación:

Lea todas las instrucciones.
Es necesario purgar previamente su sistema de alimentación de agua para efectuar la conexión del grifo.

Tools and equipment required / Outils et matériel requis / Herramientas y material requerido para instalación:



riobelpro.ca

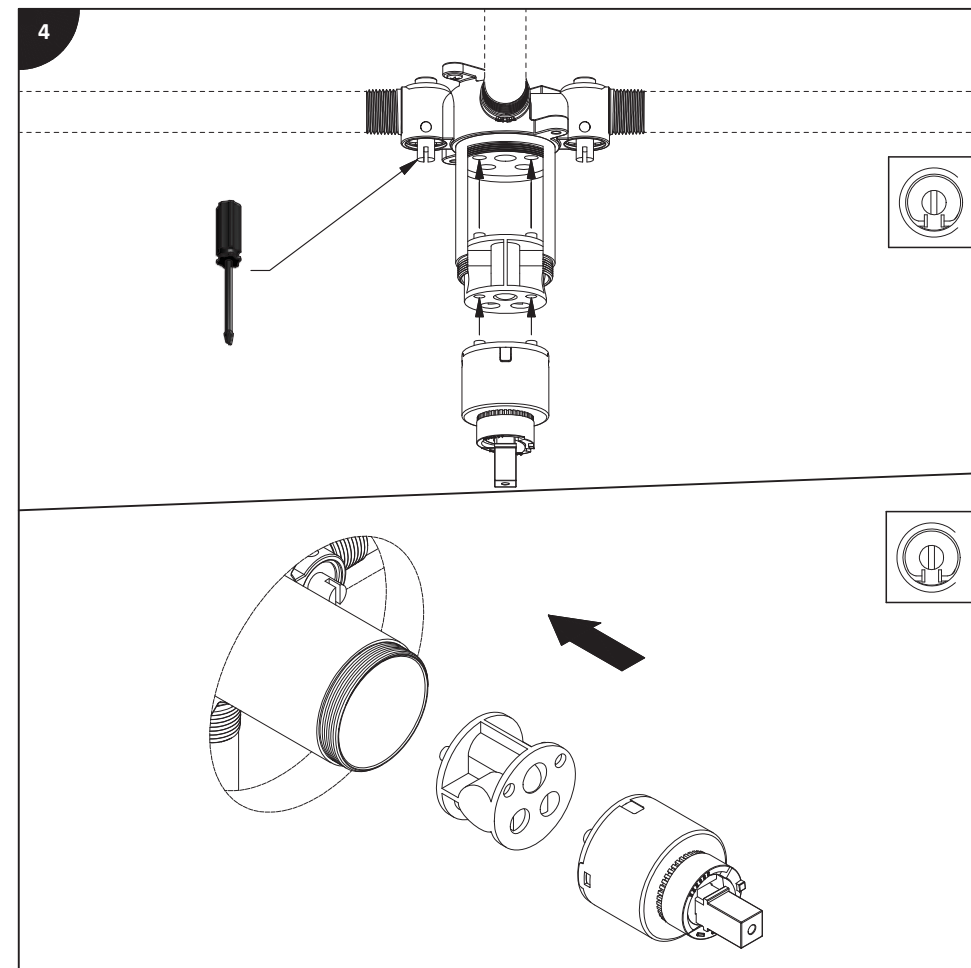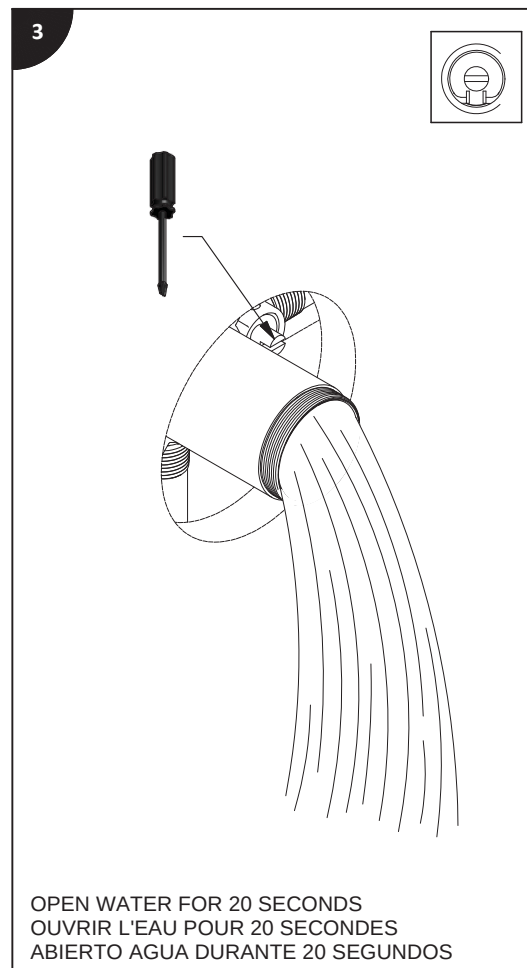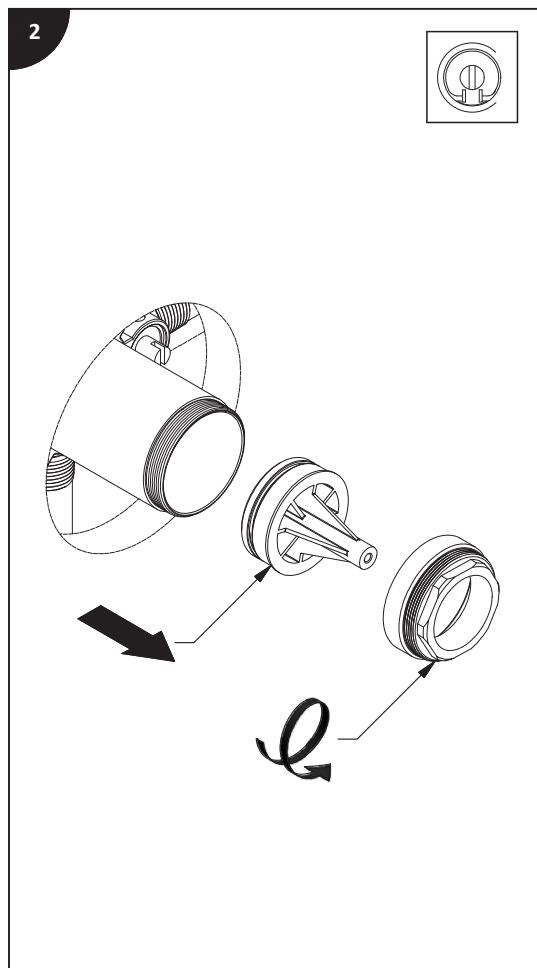

5

TIGHTENING BY HAND
SERRER À LA MAIN
APRETAR A MANO

6

7

1/4 TURN
1/4 DE TOUR
GIRAR 1/4

8

DRAIN HOLE DOWN
* TROU D'ÉVACUATION VERS LE BAS
ORIFICIO DE DRENAJE HACIA ABAJO

9

NOTCHED SCREW FOR ADJUSTMENT
VIS PRÉ-COUPÉES POUR AJUSTEMENT
TORNILLO PERFORADO PARA AJUSTAR

10

DRAIN HOLE DOWN
* TROU D'ÉVACUATION VERS LE BAS
ORIFICIO DE DRENAJE HACIA ABAJO

11

12